TaiShan Shandong Taishan Sports Equipment Co.,Ltd

Installation Of Competition Uneven Bars
TQ1003B

Web:www.taishansports.cn

Precautions for Use

1. For gymnastic only, It should be used under the guidance and supervision of professionals;

2. Children under 10 years old are not allowed to use

3. It shall not be used by more than one person at the same time, maximum load 800Kg;

4. For indoor use only;

5. Please install and use special protective mat;

6. Before using, check all parts of the equipment in good condition, lock firmly.

7. Bar rails is high-risk part,carefully checked before using.If damaged,not allowed to use.

8. In case of abnormal sound and loose parts, stop using immediately

9. No adjustment during use;

10. The bar rail cannot be excessive polished;

11. Gymnasts could spray water and magnesium onto the rails,with moderate amount.

12. Warm up before using the equipment, Stop using if you dont feel well.

13. Do not use heavy objects to hit the surface of the equipment, and do not use sharp objects to scratch the equipment;


14. Do not use liquids other than neutral detergent and water to wipe the surface of the equipment.

Product Introduction:


This product can be applied to uneven bars competition and training.Easy installation of inner adjustment tube.The gear adjustment unit is easy and fast to adjust. The width adjusting parts can easily meet the requirement of uneven bar width adjustment. The bar rail is solid, with good quality and sufficient toughness; This product can meet the professional needs of competition and training.


Description:

1. Low bar height adjustable from 165cm-195cm,high bar height adjustable from 245cm-270cm,distance between two bar 110cm-185cm, stepless adjustable.
2. Bar rails dimension:length 240cm, Φ4cm.
3. Distance of ground anchor : 550cm×400cm.

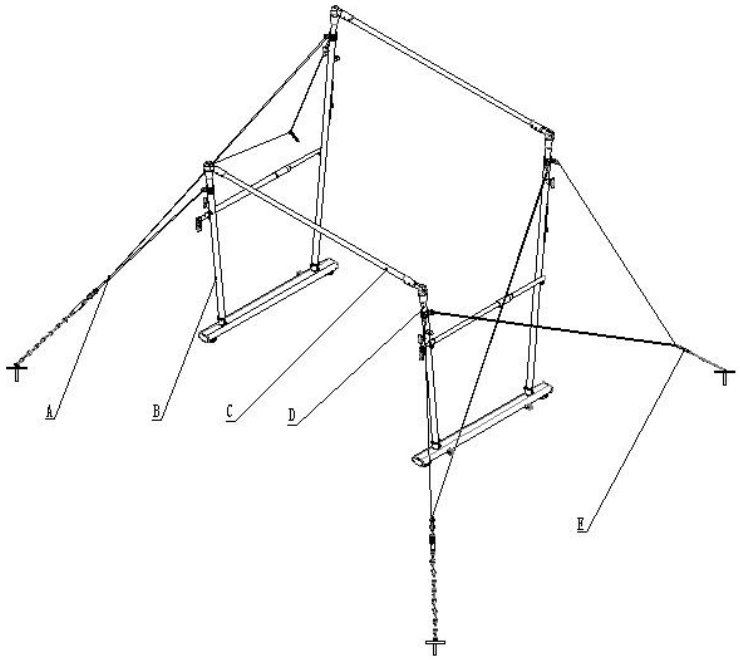



A -cable 1 B- upright 1 C- bar rails D- upright 2 E -cable 2

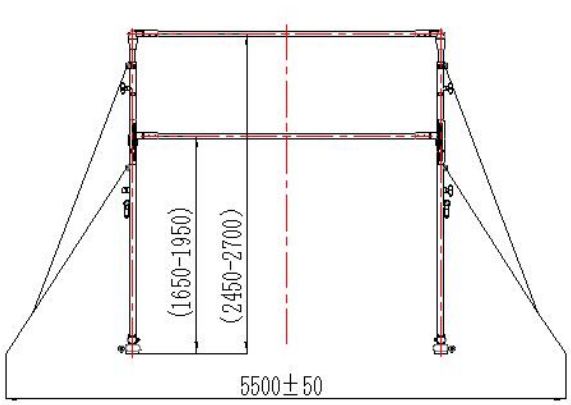

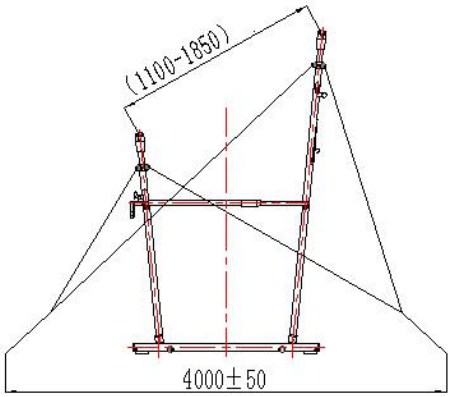

Installation instructions:


Packing list

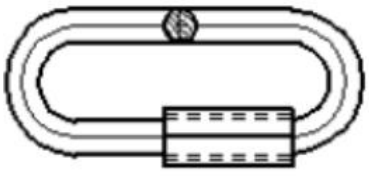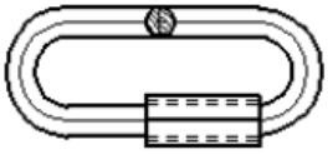
 A- cable 1 2pcs	 B- upright 1 1pc
 C- bar rails 2pcs	 D- upright 2 1pc
 E -cable 2 2pcs	 D shape shackle 1pc(spare part)
 Special O-shackle M10 (Spare parts)	 Special O-type shackle M12

Installation steps:

Step 1 - **Ground anchor detection**

Before the equipment is installed, the ground anchor shall be tested for tension. The single ground anchor shall bear the tension of not less than 8000N; The support point of the column shall bear a static load of 10000N without deformation. If used on a platform, under the above conditions, the counterweight and ground anchor connection should be greater than 8000N.

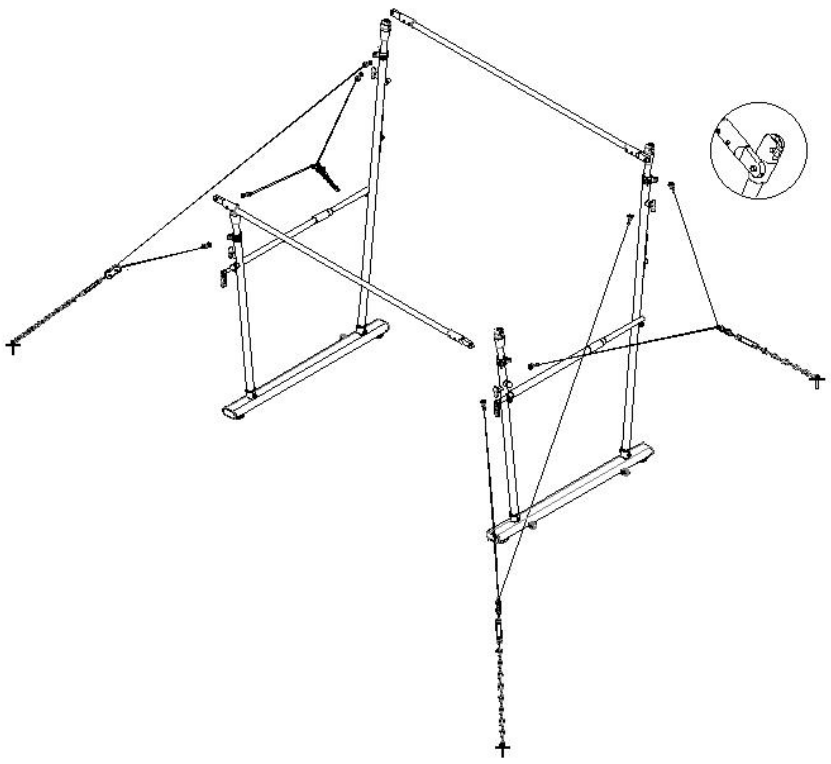

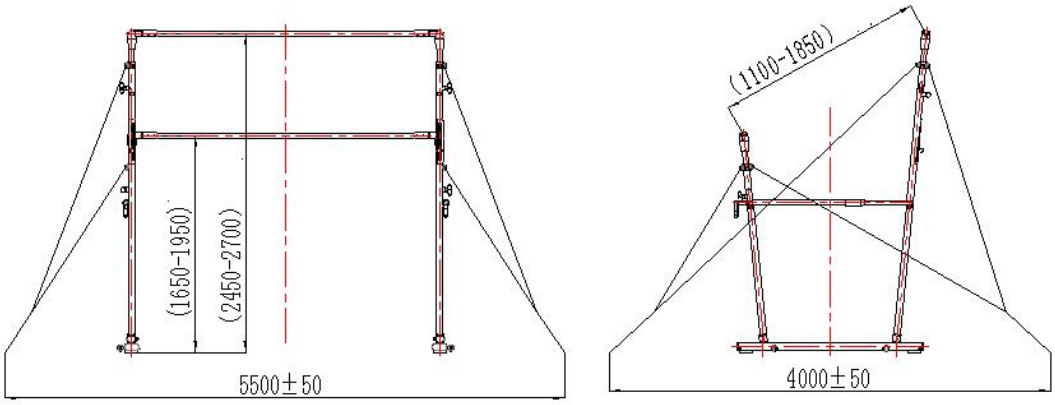

Step 2 **Bar rails installation**

The head of the upright is towards the casters, and the two ends of the bars are mounted in the two columns respectively.


Step 3 - **Cable installation**

Then the end of the wire rope of the drawstring component is hooked on the earhole of the column respectively with shackles, and the chain of the other end of the drawstring is connected with the ground anchor respectively with shackles, so that the drawstring component is close to the straight line as far as possible.

Note: When the bar rail is not in the highest state, there should be a margin in the chain length.

Tension adjustment of the rope: turn the screw buckle to adjust the tension, and then pull the rope tightly upward until the tension is appropriate.

Tighten the rope tightly after feeling the tension is appropriate.

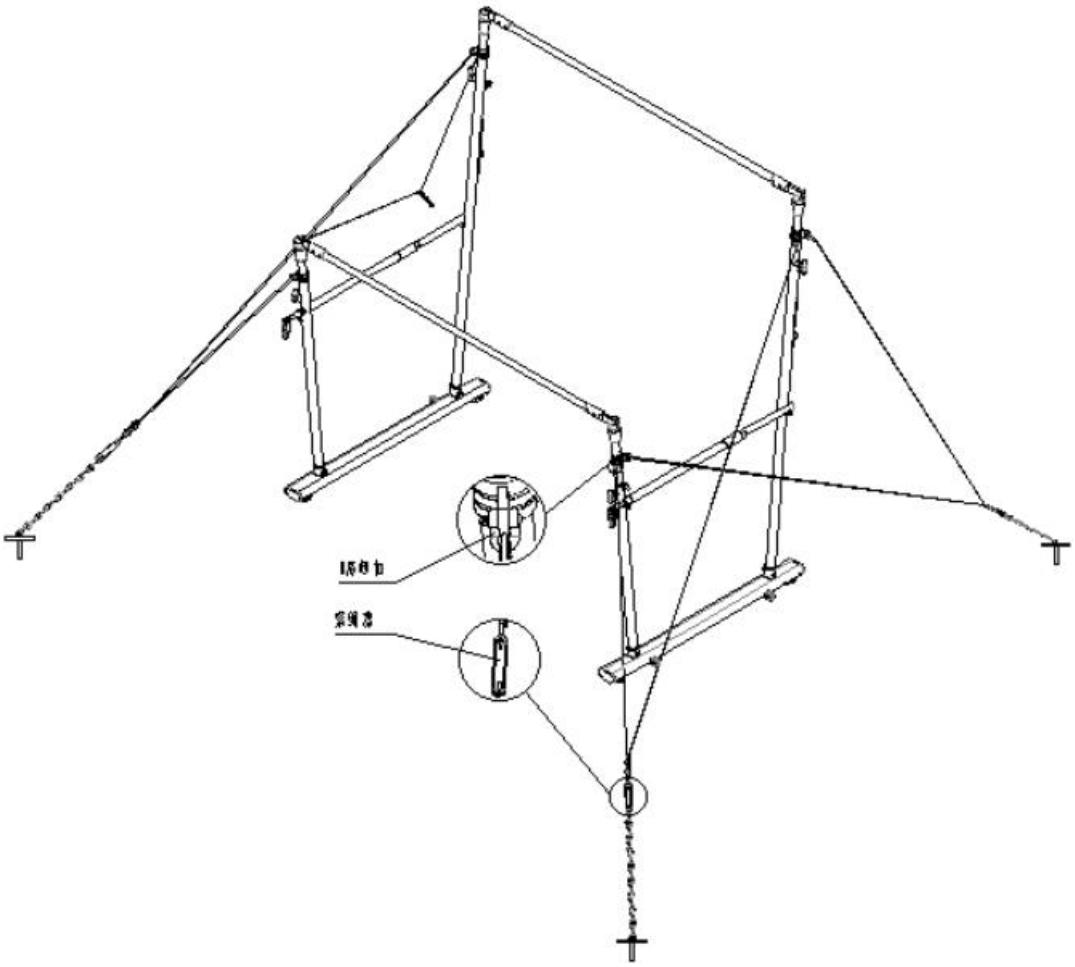

Directions for use


This product is specially used for uneven bars competition and training.

Adjustment instructions:

1. As shown in the figure below, turn the 1-width adjusting handle to quickly adjust the distance between the two bar rails (110cm-185cm), and stop adjust when the width is appropriate . At the same time, appropriately adjust the rope parts.

2. The low bar adjustment is shown in the figure. First, rotate and loosen the 3-locking part, pull the 2-gear adjusting part outward at the same time, then lift and drop the 5-inside adjusting part to achieve the height adjustment.

3. High bar adjustment is shown in the figure. Firstly, rotate and loosen the 3-locking part, pull the 2-gear adjusting part outward at the same time, then lift the 4-adjustment part to achieve the height adjustment. After making sure that the lock is not loose, it can be used.

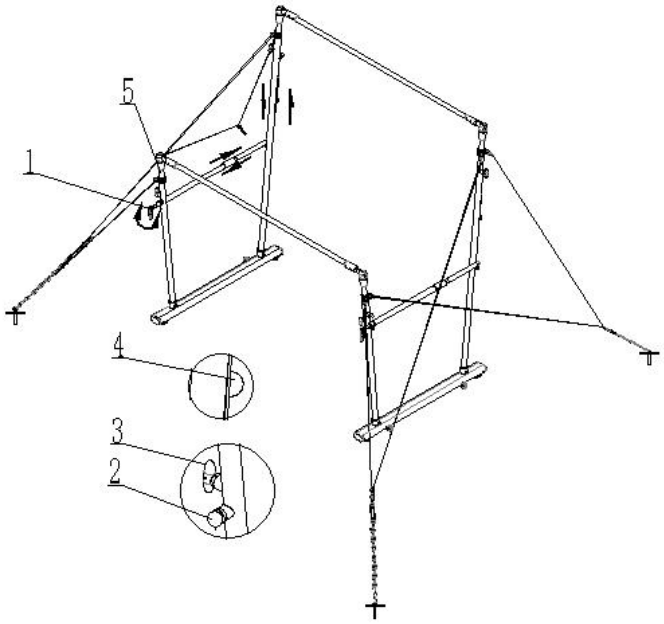

Maintenance:

1) During the use of the uneven bars, check whether all the connecting parts of the product are loose or falling off regularly, and fasten or replace them in time to ensure safety.

2) When the surface of the equipment is stained, use a clean wet towel to gently wipe the surface.

3) After 1 year of use, the equipment should be checked and maintained by professionals before use.

Warranty:

1) The warranty period from the date of delivery of the equipment is shown in the table below.

No	Name	Period	Remark
1	Upright	3 years	Not includes adjust part 1
2	Cable	3 years	
3	Rails	1year or more than 100 thousands use	

2) The damage to the equipment caused by improper use and not to do maintenance as required shall be borne by the user.

3) Damage to the equipment surface coating caused by scratches or bumps is not covered by the warranty.

4) For equipment that exceeds the warranty period, free lifetime technical support and paid maintenance services are provided.

Spare parts

No	Name	Specification	Qty	Remark
1	D shape shackle		1	
2	Special O-type shackle	M10	1	
3	Special O-type shackle	M12	1	